

How to:

OPERATING INSTRUCTIONS FOR COTTON CANDY MACHINE

1. Fit floss pan on top of machine unit.
2. With main switch OFF, fill floss head. Always fill it 90% full with sugar. (This 90% level is necessary to obtain a balanced condition in the floss head.) DO NOT OVERFILL, as it will cause excessive vibration. Before turning the power on, manually turn the head to level out the sugar.
3. Turn main switch and heat switch "ON."
4. Turn heat control knob clockwise to maximum setting for quickest warming.
5. The machine should start making floss in about 45 seconds. When unit starts making floss, reduce the heat setting. Turn heat control knob down to eliminate smoking.
6. When finished making floss, run the floss head until sugar is empty.
7. Turn the heat control dial to the maximum position, and allow machine to run for approximately 3-4 minutes. This will burn excess sugar out of the head, preventing future build up.
8. Turn heat switch "off". Run motor for 1-2 minutes to allowing floss head to cool down. Turn off motor switch and allow unit to come to complete stop.



Peter Corvallis Productions

S I N C E 1 9 5 9