


# How to: PATIO HEATER OPERATOR INSTRUCTIONS

## TO LIGHT HEATER:

1. Fully open the valve on the propane cylinder.
2. Turn safety gas control knob to "pilot" position, and push knob. Hold for approximately one minute or so to allow gas to funnel up the stem.
3. Continue to push the gas control knob while pushing and releasing the Red 'ignition' button repeatedly until there is a flame at the pilot. The (blue) pilot flame can be viewed by looking up into the unit to the left of the ignition switch and control knob panel, or by the pilot flame window protected by a small metal keyhole cover.
4. Keep the control knob depressed for at least 30 seconds after pilot ignition, then release control knob.
5. Turn the burner to the maximum rate then reduce to desired burner setting.

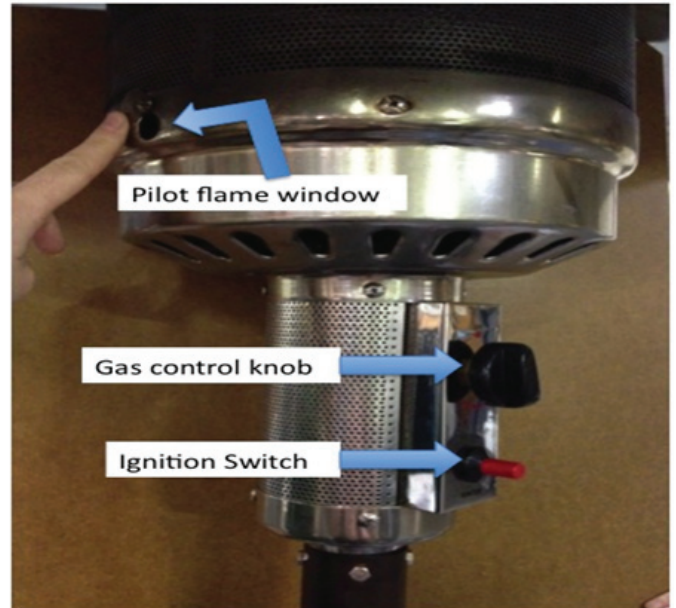

## TO EXTINGUISH HEATER:

1. Turn gas control knob clockwise to OFF position.
2. If heater is not in use, securely close the valve at the propane cylinder.
3. Do not attempt to relight the heater for at least 5 minutes after the propane cylinder valve has been closed.

## IMPORTANT SAFETY TIPS:

- **DO NOT** touch heater above control knob area while in operation or immediately after heater has been turned off, unit will be **VERY HOT!!**
- Heaters are for **OUTDOOR USE ONLY**. Unit cannot be used inside a tent or under a canopy.
- If you smell gas immediately **SHUT OFF** the heater units.
- **NEVER** hang anything from heater
- Keep all flammable objects away from area above control knob.

## CLEARANCE:

Allow at least a minimum of 4' (48") around the perimeter of the reflector disk and 2' (24") above reflector disks.



*Peter Corvallis Productions*

S I N C E 1 9 5 9